Pawsitively Clean™

BISSELL®

nifty!™

POWERWASH™
For Carpets & Hard Floors

USER'S GUIDE
11Q6 SERIES 220-240V

2 Thank You

3 Safety Instructions

4 Product View

5 Assembly

5-8 Operations

9 Maintenance and Care

10 Troubleshooting

11 Replacement Parts

12 Warranty

Thanks for buying a Pawsitively Clean™ Nifty!™ PowerWash™

We're glad you purchased a Pawsitively Clean Nifty! PowerWash for Carpets & Hard Floors. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your Nifty! PowerWash is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your Nifty! PowerWash.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR DEEP CLEANER.

⚠WARNING - To reduce the risk of fire, electric shock, or injury:

- Use indoors only.
- Do not immerse
- Use only on surfaces moistened by cleaning process
- Do not leave machine when it is plugged in
- Do not service machine when it is plugged in
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard
- Do not use machine if it has been dropped, damaged, left outdoors or dropped into water
- Do not expose to rain, store indoors
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces
- Do not carry the appliance while in use
- Do not unplug by pulling on cord. Unplug by grasping plug not the cord
- Do not handle plug or appliance with wet hands
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts
- Do not pick up hot or burning objects
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapour
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours
- Remove plug from electrical outlet before cleaning or maintaining the appliance
- Not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not modify the Earthed plug
- Do not allow to be used as a toy
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage
- Keep openings free of dust, lint, hair, etc.
- Keep appliance on a level surface
- Turn off all controls before unplugging
- Be extra careful when cleaning stairs
- Pay close attention when working around children

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

⚠ WARNING:

THIS APPLIANCE MUST BE EARTHED.

IMPORTANT FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

Product view

⚠WARNING:

To reduce the risk of fire and electric shock due to internal component damage, use only Pawsitively Clean or BISSELL cleaning formlas intended for use with the deep cleaner. Non-BISSELL cleaning formulas may harm the machine and void the warranty.

Cleaning formulas:

Keep plenty of genuine Pawsitively Clean or BISSELL Cleaning Formula on hand so you can clean whenever it fits your schedule. Always use genuine Pawsitively Clean or BISSELL deep cleaning formulas. Non-BISSELL cleaning formulas may harm the machine and will void the warranty.

946 mL Full-Size Machine Pet Formula **#56A8-F**

946 mL Ahhh™ Full-Size Machine Allergen Formula **#98P1-G**

946 mL Spiffy™ Sealed Hard Floor Full-Size Machine Formula **#85H9-F**

946 mL Ewww™ Enzyme Power Pet Stain & Odor Remover **#99M8-F**

946 mL Dang™ Oxygen Action Pet Stain & Odor Remover **#19H1-F**

Assembly

1. Slide upper body into lower body.
2. Secure with screws.
3. Slide handle assembly down into upper body until it will go no further. Align screw slots.
4. Secure with screw.
5. Place clean water/solution tank on back of unit.

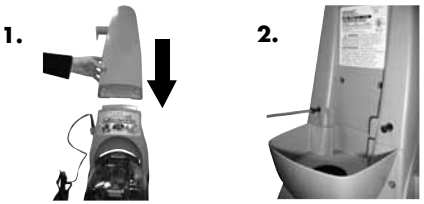

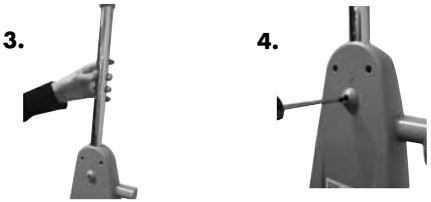

Operations

Before you clean

1. Remove easily moved furniture (chairs, lamps, coffee/cocktail tables, etc.) from room if needed.
2. Vacuum carpet thoroughly.
3. Decide where to begin. Plan to leave a path open to empty soiled water and refill cleaner.

   Note: Carpeting will dry in three to four hours, depending on carpet style and air circulation in room. A floor fan speeds drying

Tip:

Always vacuum thoroughly before you deep clean. If possible, move large furniture to an area you will not be cleaning.

Fill the tank

1. Remove the clean water/solution tank by lifting it straight up, then away from the lower body.
2. Unscrew the black cap at the bottom of the clean water/solution tank.
3. Fill to the FORMULA line with Pawsitively Clean or BISSELL cleaning formula. Fill the rest of the tank with hand hot (not boiling) tap water to the water fill line. Replace and tighten the black cap.
4. Place clean water/solution tank on lower body.
5. Rotate Quick Release Cord Wrap™ to release the power cord and plug into an outlet.

⚠ WARNING:

To reduce the risk of fire, use only Pawsitively Clean or BISSELL Advanced Cleaning Formulas for full size machines in your deep cleaner. Use of cleaning formulas that contain lemon or pine oil may damage this appliance and void warranty. Chemical spot cleaners or solvent-based soil removers should not be used. These products may react with the plastic materials used in your deep cleaner, causing cracking or pitting.

Tip:

Deep cleaning spots, spills and high traffic areas on a regular basis can prolong carpet life.

Operations

Carpet cleaning

1. With your foot, press the red power switch [located in foot of unit] ON .
2. With foot, press the detent lever on left side of lower body.
3. Depress spray trigger to spray cleaning solution. **Do not overwet.**
4. To suction up water, repeat motion over same area without pressing the spray trigger.
5. Repeat steps 3 and 4 until no more dirt can be removed.
6. Continue to clean entire carpet, working in 1m x 1m sections.
7. Empty the collection tank when dirty water reaches the full line, or when the clean water/solution tank is empty.
8. If floor nozzle stops spraying, turn power switch OFF and check water and cleaning solution levels. Refill if needed.

Tip:

It is recommended that every time your clean water/solution tank needs refilling, that you empty the contents of the collection tank. If the collection tank gets too full, you may begin to see foam spitting out of the vent cover. If this happens empty the collection tank.

Empty collection tank

1. Turn power switch OFF and unplug power cord from outlet.
2. Remove and empty collection tank.
   - **a.** Release collection tank latches [1 each side] by pulling up from bottom of latch and then out.
   - **b.** Carefully remove collection tank from lower body by lifting handle.
   - **c.** Carry collection tank to a toilet or sink. To empty, pour out contents using opening at back of tank.
   - **d.** Rinse collection tank thoroughly.
   - **e.** Remove vent cover from top of collection tank by pulling the tab on top and pulling up. Remove foam filter from vent cover. Rinse filter thoroughly and replace back into vent cover. Replace vent cover back into collection tank, making sure the tab clicks back into the locked position.

2a.

2b.

2c.

2e.

Operations

Empty collection tank continued

3. Remove lint and hair from red gasket in base of unit. **(Do not remove gasket)**

4. Clean nozzle window by lifting latch and removing from machine. Rinse under running water. When finished replace nozzle and secure with latch.

5. Replace collection tank on base of unit and secure with latches.

3

4

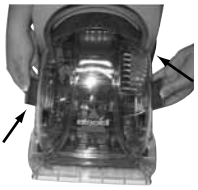

Operations

Hard floor cleaning

1. Remove the collection tank (refer to steps 2a and b in the "To empty the collection tank" section on page 6)
2. Attach the hard floor tool by hooking it into the front of the removable nozzle and swinging it down until the tabs pop into place.
3. Replace the collection tank. Be sure to attach the two latches.
4. Fill clean water/solution tank with Pawsitively Clean or BISSELL Hard Floor formulas to FORMULA fill line. Fill the rest of the tank with hand hot (not boiling) tap water to the WATER fill line. Replace and tighten the black cap.
5. Follow steps 1-8 in "Carpet Cleaning" section on page 6.

2.

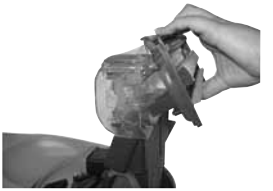

Maintenance and care

When your done

1. Turn power switch OFF.

2. Unplug power cord from outlet.

3. Remove and empty collection tank.

- **a.** Release collection tank latches [1 each side] by pulling up from bottom of latch and then out.
- **b.** Carefully remove collection tank from lower body by lifting handle.
- **c.** Carry collection tank to a toilet or sink. To empty, pour out contents using opening at back of tank.
- **d.** Rinse collection tank thoroughly.
- **e.** Remove vent cover from top of collection tank by pulling the tab on top and pulling up. Remove foam filter from vent cover. Rinse filter thoroughly and replace back into vent cover. Replace vent cover back into collection tank, making sure the tab clicks back into the locked position.

4. Remove lint and hair from red gasket in base of unit. **(Do not remove gasket)**

5. Clean nozzle window by lifting latch and removing from machine. Rinse under running water. When finished replace nozzle and secure with latch.

6. Replace collection tank on lower body and secure with latches.

7. Wrap power cord around Quick Release Cord Wrap™ on side of deep cleaner.

8. Wipe all surfaces with a soft cloth. Store cleaner upright in a protected, dry area.

NOTE: You may have cleaning solution remaining in the clean water/solution tank. You may store your deep cleaner this way for the next cleaning task, but never keep soiled solution in the collection tank.

⚠ WARNING:
To reduce the risk of injury from moving parts and/or electrical shock, turn power switch OFF and disconnect plug from electrical outlet before performing maintenance or trouble-shooting checks.

⚠ CAUTION:
Do not store unit where freezing may occur. Damage to internal c omponents may result.

Troubleshooting

⚠ WARNING:
To reduce the risk of electric shock, or injury, unplug machine from outlet before servicing.

Reduced spray or no spray

Possible Cause	Remedy
1. Clean water/solution tank empty	1. Refill tank with water and formula
2. Clean water/solution tank cap clogged	2. Soak tank cap in warm water and then rinse under running water

Deep cleaner not picking up cleaning solution

Possible Cause	Remedy
1. Collection tank not aligned/secured	1. Check tank for proper alignment and secure with side latches
2. Collection tank full	2. Empty tank
3. Removable nozzle installed improperly	3. Align four "hooks" into bottom first, then snap into place on top
4. Removable nozzle full of debris	4. Remove nozzle and rinse under running water
5. Red lint screen under collection tank clogged	5. Remove debris from lint screen

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a Pawsitively Clean product from BISSELL.

Please do not return this product to the store.

Replacement parts

Item	Part No.	Part Name
1	203-6023	Handle Assembly
2	203-5540	Solution Tank (Includes Cap and Insert Assembly)
3	203-5571	Collection Tank (Transparant Vulcanic satin)
4	203-5541	Solution Tank Cap and Insert Assembly
5	203-5527	Foam Filter
6	203-5546	DirtLifter™ PowerBrush
7	203-5548	Hard Floor Tool

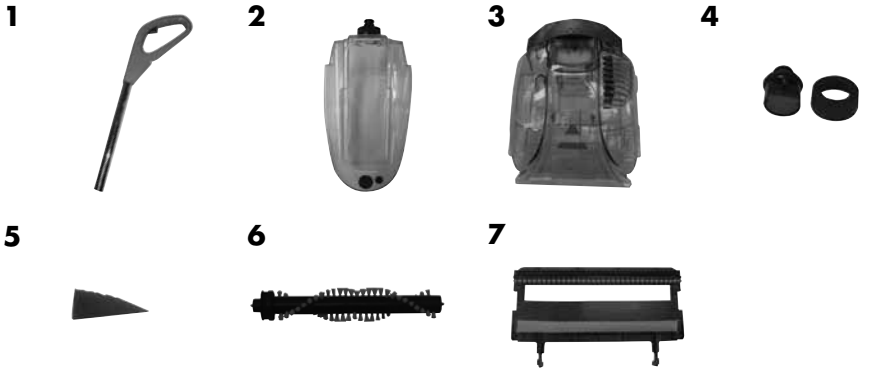

Note: Cleaning Formula: Refer to bottom of page 4 of this guide for a full selection of cleaning formula available for purchase.

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by E-mail, telephone, regular mail as described below, or contact your local in country distributor.

Limited One Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part due to manufacturer defect.

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL recommends that the original packaging be kept for the duration of the warranty period in case such need arises within the warranty period that the item need re-packing and transportation.

BISSELL Consumer Services:

If your BISSELL product should require service or if you need information about repairs, authorized service centers in your area, replacement parts or your warranty, please contact BISSELL Consumer Services, as indicated below, or contact your local in-country distributor.

For Australian inquiries:
Monday - Friday 9 am — 5 pm

BISSELL AUSTRALIA PTY LIMITED
42 Rocco Dr.
Scoresby 3179
Victoria
Australia
Telephone: 1.800.811.183

For New Zealand inquiries:
Monday - Friday 9 am — 5 pm

Parex Industries Ltd.
5 Tolich Place
Henderson 0610
Auckland
New Zealand
Telephone: 0800.247.735

For all other inquiries:
Monday - Friday 8 am — 4 pm

BISSELL Homecare, Inc.
PO Box 1888
Grand Rapids, Michigan 49501 USA
Telephone: 01.616.453.4451
Fax: 01.616.453.1383

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**

BISSELL AND ITS IN-COUNTRY DISTRIBUTORS ARE NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

FOR AUSTRALIAN CONSUMERS ONLY: OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS WARRANTY IS IN ADDITION TO OTHER RIGHTS OR REMEDIES UNDER LAW. NOTHING IN THIS WARRANTY EXCLUDES, LIMITS OR MODIFIES ANY LIABILITY OF BISSELL WHICH IS IMPOSED BY LAW, OR LIMITS OR MODIFIES ANY REMEDY AVAILABLE TO THE CONSUMER WHICH IS GRANTED BY LAW. TO MAKE A CLAIM UNDER THIS WARRANTY CONTACT BISSELL AUSTRALIA PTY LTD (DETAILS ABOVE). CONTACT BISSELL PRIOR TO RETURNING ANY GOODS. WHERE AGREED, BISSELL WILL REIMBUSE REASONABLE POSTAGE / HANDLING COSTS (IF ANY) FOR RETURNING GOODS TO BISSELL.

BISSELL®

Experts In Home Cleaning™

©2012 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4408
Rev 2/12
Visit our website at:
www.bissell.com